



## INSTRUCTION MANUAL

### Internal filter



Before installing the filter, please read the following instructions in detail, to use it in accordance with the following operation requirements.

**1. This product must be used at the corresponding voltage and frequency**

**2. The product must be completely immersed in water during work, and should not be exposed to the water surface, otherwise it will cause permanent damage to it.**

**3. Power off the filter before maintenance to ensure safety**

**4. This product is only suitable for use in fresh water or sea water, not**

**for other liquids.**



**5. Do not allow the filter dry running for a long time or it will damage the filter.**

**6. Do not use the product at the water temperature above 35°C or below 0 °C to avoid damaging the filter.**

**7. Stop using the product immediately if the power cord is damaged**

**8. The air pipe should be used above the water surface**

## INSTRUCTION FOR USE

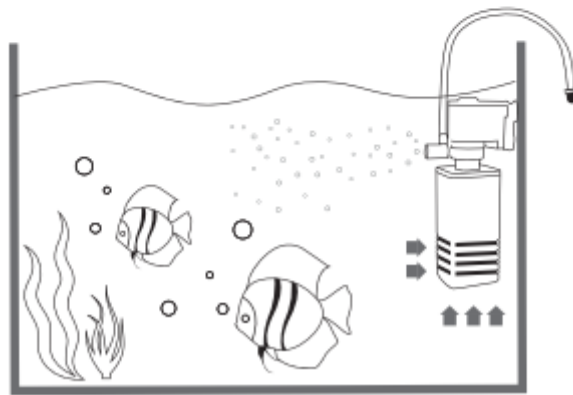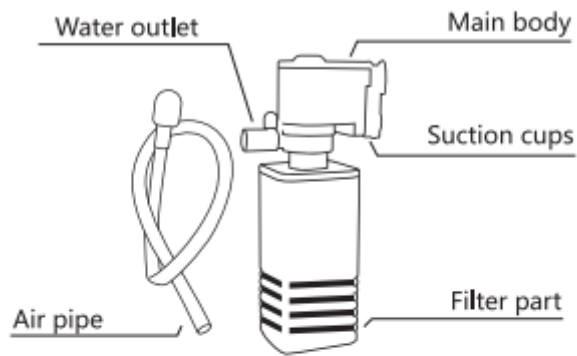

## SPECIFICATION

Barcode	Power/W	Water flow/L/H
8719138037612	4W	400 L/H
8719138037629	6W	500 L/H